



**BRASS 3-WAY TEE**

**TE195M7023**  
3/8" SAE



**BRASS 4-WAY CROSS**

**TE195M7024**  
3/8" SAE



**3/16" BUNDYTUBE JOINER**

**TE195M6203**  
3/8" SAE female joiner with male tube nuts.



**BRASS TUBE NUT**

**TE195BP1**  
3/8" SAE x 3/4" (l) overall. Fits 3/16" tubing.



**BRASS TUBE NUT**

**TE195P555**  
3/8" SAE x 9/16" (l) overall. Fits 3/16" tubing.



**BRASS TUBE NUT**

**TE195BP9**  
3/8" SAE x 11/16" (l) overall. Fits 3/16" tubing.



**BANJO BOLT**

**TE195HDB**  
3/8" SAE Banjo Bolt



**MASTER CYLINDER ADAPTER/NUT**

**TE195MCA** 3/8" SAE Adapter/Nut



**BRASS OLIVE**

**TE195603**  
Fits 3/16" tubing.



**COPPER WASHER**

**TE195CW10**  
10mm inside diameter.



**BRASS LOCK NUT**

**TE195LN** Fastens brake hose to chassis bracket. 3/8" SAE



**HOSE BRACKET**


**TE195LB** Hose bracket, welds to chassis. Dimensions: 23mm (w) x 40mm (h)

**PLASTIC BUNDY TUBE CHASSIS CLIPS**



**TE5HBTC / TE5HBTCP**

Drill a 6mm hole, slide in up to shoulder, strike the head which drives the shank in, riveting it in place.

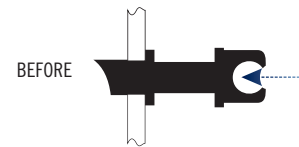

BEFORE



**TE5HB01SS** Stainless steel 3/16" tube clamp



**TE5HB01** Inside diameter: 5mm Rivet hole: 4.5mm



**TE5HB02** Inside diameter: 6mm Rivet hole: 3.5mm



AFTER

Holds tubing away from the chassis